


11 :
ke RDP connection of s
Go to run and type ms

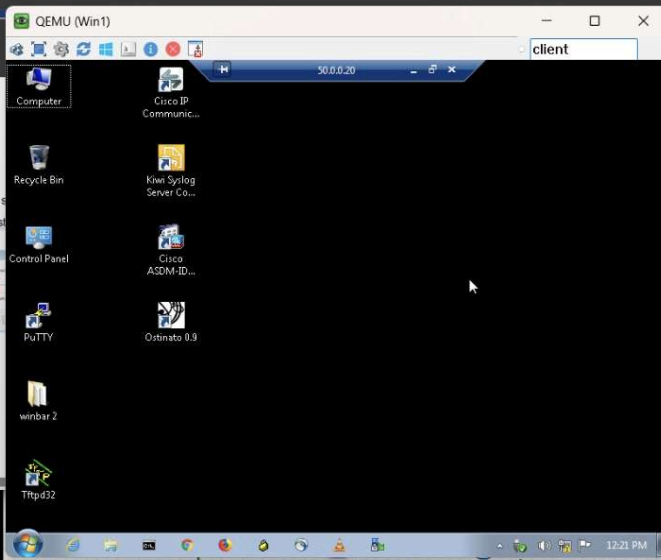

Win1
50.0.0.10

WINDOWS PASSWORD : Test123

The screenshot displays a virtual lab environment with two Windows VMs, Win1 and Win2, connected via a network. The Win1 VM is running a command prompt showing network configuration and ping results. The Win2 VM is also running a command prompt showing ping results. The lab interface includes a taskbar, a sidebar with instructions, and a bottom status bar with a physical/virtual switch and a timer.

Win1 Command Prompt Output:

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\User>ping 50.0.0.20
'ping' is not recognized as an internal or external command,
operable program or batch file.

C:\Users\User>ping 50.0.0.20
Pinging 50.0.0.20 with 32 bytes of data:
Reply from 50.0.0.20: bytes=32 time=2ms TTL=128
Reply from 50.0.0.20: bytes=32 time=1ms TTL=128
Reply from 50.0.0.20: bytes=32 time=1ms TTL=128
Reply from 50.0.0.20: bytes=32 time=1ms TTL=128
Ping statistics for 50.0.0.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 2ms, Average = 1ms

C:\Users\User>
```

Win2 Command Prompt Output:


```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\User>ping 50.0.0.10
Pinging 50.0.0.10 with 32 bytes of data:
Reply from 50.0.0.10: bytes=32 time=1ms TTL=128
Reply from 50.0.0.10: bytes=32 time=1ms TTL=128
Reply from 50.0.0.10: bytes=32 time=1ms TTL=128
Reply from 50.0.0.10: bytes=32 time=1ms TTL=128
Ping statistics for 50.0.0.10:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 1ms, Average = 1ms

C:\Users\User>
```

Lab Interface Details:

- Taskbar:** Shows icons for network, volume, and system clock (12:16 PM).
- Sidebar:** Contains instructions for Step 4 (Check network reachability) and Step 5 (Set hostname for two computers).
- Bottom Status Bar:** Includes a physical/virtual switch, a timer (01:00:00), and a START button.

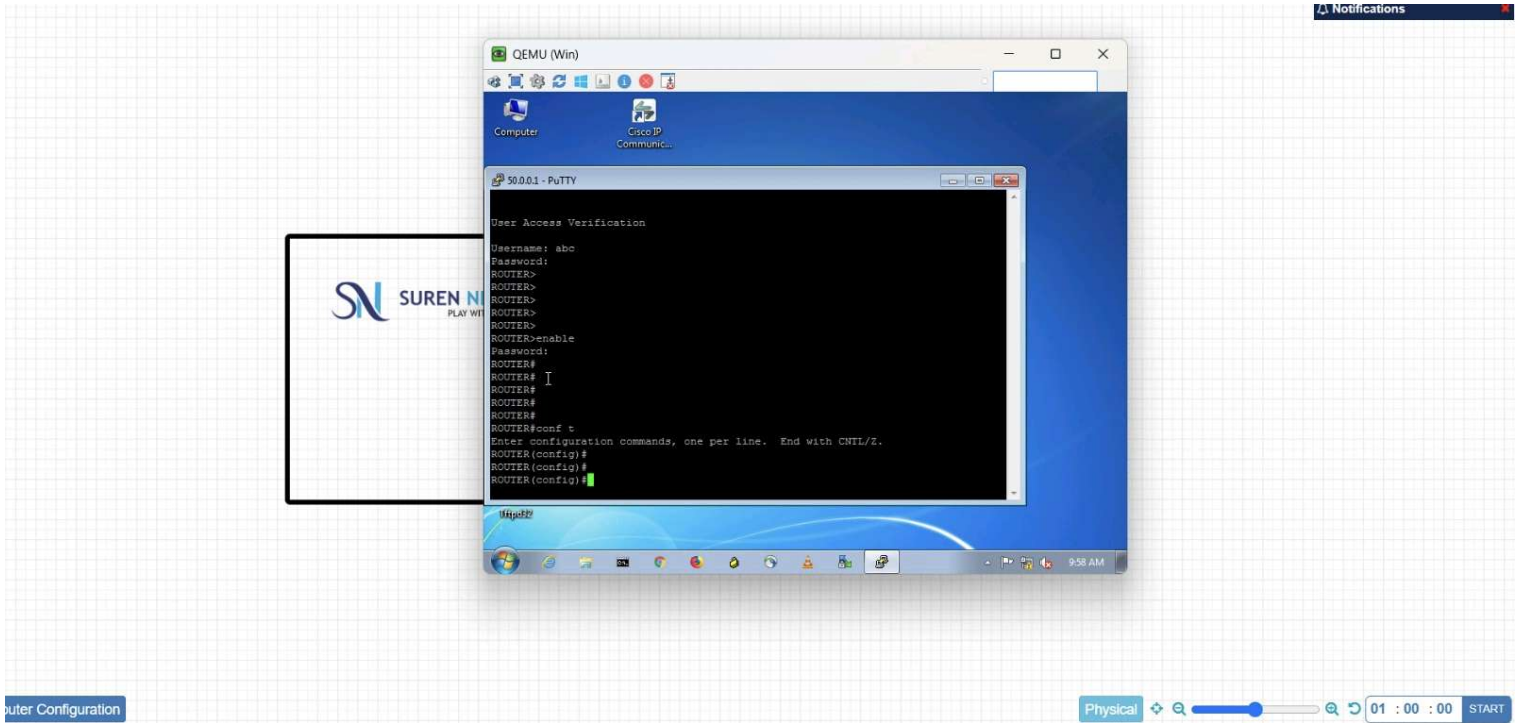

 ROUTER

```
ROUTER#disable
ROUTER>enable
ROUTER#configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.
ROUTER(config)#interface ethernet0/0
ROUTER(config-if)#ip address 50.0.0.1 255.0.0.0
ROUTER(config-if)#no shutdown
ROUTER(config-if)#exit
ROUTER(config)#exit
ROUTER#
*Jul 12 13:05:31.273: %SYS-5-CONFIG_I: Configured from console by console
ROUTER#show ip interface brief
Interface                IP-Address      OK? Method Status      Protoc
ol
Ethernet0/0              50.0.0.1        YES manual up          up
Ethernet0/1              unassigned      YES TFTP    down        down
Ethernet0/2              unassigned      YES TFTP    down        down
Ethernet0/3              unassigned      YES TFTP    down        down

ROUTER#
```

Terminal

Win x ROUTER x

50.0.0.1 - PuTTY

ROUTER>enable

Password:

ROUTER#show ip interface brief

% Invalid input detected at '^' marker.

ROUTER#show ip interface brief

Interface	IP-Address	OK?	Method	Status	Protocol
Loopback0	50.0.0.1	YES	manual	up	up
Ethernet0/0	unassigned	YES	TFTP	down	down
Ethernet0/1	unassigned	YES	TFTP	down	down
Ethernet0/2	unassigned	YES	TFTP	down	down
Ethernet0/3	unassigned	YES	TFTP	down	down

ROUTER#?

Exec commands:

<1-99>	Session number to resume
access-enable	Create a temporary Access-List entry
access-profile	Apply user-profile to interface
access-template	Create a temporary Access-List entry
alps	ALPS exec commands

UtpcB2

1:23 PM